

# groov▶▶e Kidz



## *User Manual*

Sleep Trainer  
Alarm Clock

**GV-CK01**



## **30 Day Right To Return**

*We do not envisage any problems occurring with your Groov-e GV-CK01 Kidz Sleep Trainer Alarm Clock. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.*



## **12 Month Guarantee**

*This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.*



## **Extended Warranty**

*Please register your product within 30 days from date of purchase [www.groov-e.co.uk/warranty](http://www.groov-e.co.uk/warranty). Proof of purchase required.*



## **Contact Us**

*Reach out to us at [info@groov-e.co.uk](mailto:info@groov-e.co.uk) or visit [www.groov-e.co.uk](http://www.groov-e.co.uk)*

***“Congratulations*** on your purchase and ***Thank You*** for choosing the groov-e GV-CK01 Kidz Sleep Trainer Alarm Clock. Please read the user guide carefully before using”.

### ***Important safety information***

- *Keep the product and all its parts out of reach of small children.*
- *Only the Power Adaptor supplied should be used with the product. Using an unauthorised Power Adaptor may irrecoverably damage the product and will invalidate your guarantee.*
- *Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.*
- *No naked flame sources, such as lighted candles, should be placed on or near the product.*
- *Keep it away from bright sunlight or heat sources, such as a radiator.*
- *Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.*
- *Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.*
- *Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.*
- *Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.*
- *Disconnect your Clock from the mains power supply during thunderstorms.*
- *Always check that you have completely switched off your Clock , before you disconnect the power supply.*
- *If the Clock will not be used for a long period of time, make sure that the mains power is unplugged.*
- *This product has an integral coin battery and should not be disposed of in the normal household waste but taken to an appropriate recycling facility, where and when these are available.*
- *Never throw batteries in a fire or attempt to open the outer casing.*

# OVERVIEW


## In the box:

- 1 x GV-CK01 Kidz - Sleep Trainer Alarm Clock
- 1 x USB-C to USB-A Power Cable
- 1 x User manual

## Your Alarm Clock

### FRONT


Turn Alarm Off Button

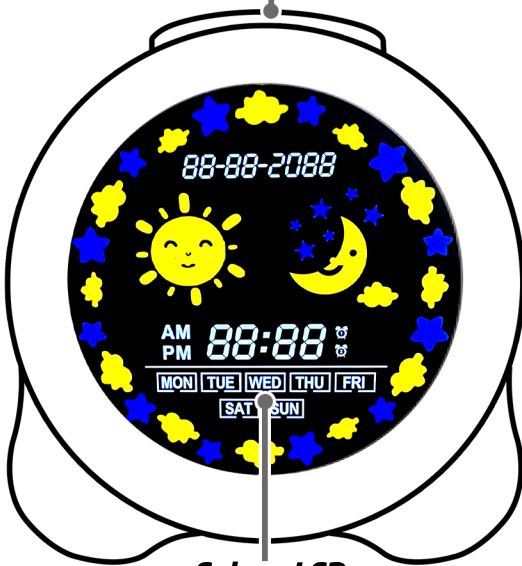

Colour LCD Display

### BACK

Speaker

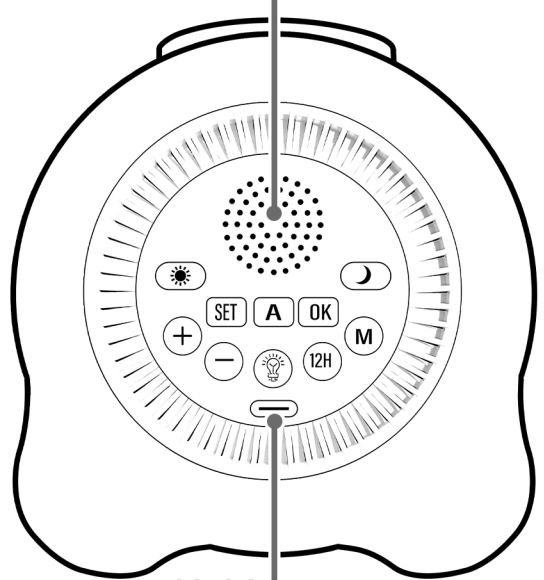

USB-C Power Input  
DC 5V/1A

## BUTTONS



Sun Button



Moon Button

SET

Set Button

A

Alarm Button

OK

OK Button



Volume +



Volume -



Backlight Brightness

12H

Time Button

M

M Button

# OPERATION

## POWER ON

Connect the USB-C end of the supplied power cable into the USB-C socket on the back of the alarm clock. Plug the USB-A end of the power cable into a computer or other USB power supply. You can use a mains power charger with an output voltage of 5V/1A but please **Do NOT** use a mains power charger above 5V or fast charging as this may damage the alarm clock.

**Note:** There is a built-in CR1220 3V battery in the alarm clock. If the power supply is removed, the time/date and alarms will still be saved. If the alarm clock is unplugged for an extended period of time the settings will reset to the default date 01-01-2021.

## SETTING THE TIME & DATE

Press the **SET** button to enter the date and time setting mode, the year will start to flash, press **+** or **-** to select the year, and then press **OK** to confirm. Then the month will flash, press **+** or **-** to set the month, then press the **OK** button to confirm, and then the day will flash, press **+** or **-** to set the day, and then press the **OK** button to confirm.

The hour on the clockface will start to flash, press **+** or **-** to set the hour and minute, then press **OK** to confirm.

## SETTING THE ALARM

Press the **A** button on the back of the alarm clock to start set alarm, the hour on the clockface will start to flash, press **+** or **-** to set the hour, then press **OK** to confirm. The minutes will start to flash, press the **+** or **-** button to set the minute, then press the **OK** button to confirm.

To turn the alarm ON/OFF the press the **+** or **-** button, the alarm interface will display ON (alarm clock is turn on) or OFF (alarm clock is turn off). Press **OK** to confirm.

After the first alarm is set, the icon of the second alarm will appear, repeat the previous steps to set the second alarm.

## SETTING SUN RISE & MOON LCD DISPLAY

The default time when the sun icon and cloud appear is 6:00 AM-6:00 PM, after 6:00 PM, the sun will disappear and the moon and stars will appear.

If you want to set the time when the sun appears at 7:00 or 8:00AM, please press the sun icon button on the back, the hour will start to flash, you set the hour to 8:00am, then press the **OK** button, and wait for 3 seconds to set.

The display time of the moon is 6:00PM-6:00AM. If you want the time of the moon to appear from 7:00pm, please press the moon button. To set repeat the same process as before.

# OPERATION

## ALARM VOLUME

To adjust the alarm volume press the **M** button and then press the **+** or **-** buttons to increase or decrease the ringtones.

## SELECTING THE ALARM RINGTONE

Press **M** button, you can choose between 6 different ringtones, when you hear the ringtone you like, press the **OK** button to set.

## TURN ALARM OFF

When the alarm is ringing press the top button to stop the alarm.

## SNOOZE

When the alarm goes off, it will sound for 60 seconds, then turn off and automatically reactivate after 5 minutes for another 60 seconds. After this second cycle, the alarm will switch off completely. This allows for a single snooze cycle (not continuous). If the top button is pressed while the alarm is sounding or during the snooze period, the alarm will turn off immediately.

## BACKLIGHT BRIGHTNESS

Press light icon button to adjust the backlight brightness, there are four light settings Bright - Medium - Low - Off

# FEATURES

- **Children's digital alarm clock**
- **Sleep trainer - teach your child when it's time to sleep and when it's time to wake up!**
- **Peaceful sleep with the moon & stars**
- **Rise & shine to the sun & clouds**
- **Simple setup and easy to use**
- **12/24 Hour clock with dual alarm**
- **6 Preset alarm sounds to choose from**
- **Calendar (day/date/month/year)**
- **Adjustable brightness (high/medium/low/off)**
- **Adjustable volume (3 settings)**
- **Snooze function**
- **Colour LCD display**
- **USB-C to USB-A power cable (included)**
- **Power input: DC 5V/1A (required)**



Sleep  
Trainer



6 Alarm  
Sounds



Adjustable  
Brightness



Adjustable  
Volume



USB  
Powered

## Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



## **BATTERY DISPOSAL**

*This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)*

*Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.*

*Never throw batteries into a fire or attempt to open the outer casing.*

*Should your product develop a fault please visit our website at [www.groov-e.co.uk](http://www.groov-e.co.uk)*

## **GUARANTEE**

***Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.***

***1)*** Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

***2)*** This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

***3) This Guarantee Excludes:***

***(i)*** All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

***(ii)*** Alterations or adjustments made to equipment

***(iii)*** Loss of data resultant from malfunction of hard drive or other storage device

***(iv)*** Damage caused to any third party device as a result of using the product.

***4)*** No liability under this guarantee shall be incurred:

***(i)*** In respect of damage or loss occurring during transit to or from the purchaser

***(ii)*** Where the serial number plate of the equipment has been removed or altered in any way.

***5)*** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

***6)*** The cost of carriage to and from Groov-e shall be borne by the purchaser.

***7)*** This guarantee is personal to the original purchaser and is not transferable.

***8)*** If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

***This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).***

## **DECLARATION OF CONFORMANCE**

*Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:*

**groov»»e**

**Unit J  
Braintree Industrial Estate  
Braintree Road  
Ruislip  
Middlesex  
HA4 0EJ UK**

**Authorised EU Representative**

*Rashmian EU Ltd  
Robwyn House  
Suite 3E  
Corrintra  
Castleblayney  
Co. Monaghan  
Ireland*

**[www.groov-e.co.uk](http://www.groov-e.co.uk)**

**Email: [info@groov-e.co.uk](mailto:info@groov-e.co.uk)**

**Telephone: 020 8839 0978**

*Register your purchase for extended warranty*  
**[www.groov-e.co.uk/warranty](http://www.groov-e.co.uk/warranty)**