

groov»e

Rise



User Manual

*Alarm Clock
Radio*

GV-CR05



30 Day Right To Return

We do not envisage any problems occurring with your Groov-e GV-CR05 Rise. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase www.groov-e.co.uk/warranty. Proof of purchase required.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

“Congratulations on your purchase and **Thank You** for choosing the groov-e GV-CR05 Rise, Alarm Clock Radio. Please read the user guide carefully before using”.

Important safety information

- *Keep the product and all its parts out of reach of small children.*
- *Only the Power Adaptor supplied should be used with the product. Using an unauthorised Power Adaptor may irrecoverably damage the product and will invalidate your guarantee.*
- *Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.*
- *No naked flame sources, such as lighted candles, should be placed on or near the product.*
- *Keep it away from bright sunlight or heat sources, such as a radiator.*
- *Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.*
- *Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.*
- *Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.*
- *Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.*
- *Disconnect your Clock Radio from the mains power supply during thunderstorms.*
- *Always check that you have completely switched off your Clock Radio, before you disconnect the power supply.*
- *If the Clock Radio will not be used for a long period of time, make sure that the mains power is unplugged.*
- *To avoid possible hearing damage, do not listen to this radio at high volume levels for long periods of time. Always keep the volume within reasonable limits.*

OVERVIEW

In the box:


1 x GV-CR05 Rise - Alarm clock radio

1 x Mains adaptor

1 x User manual

Your Alarm Clock Radio

Top View

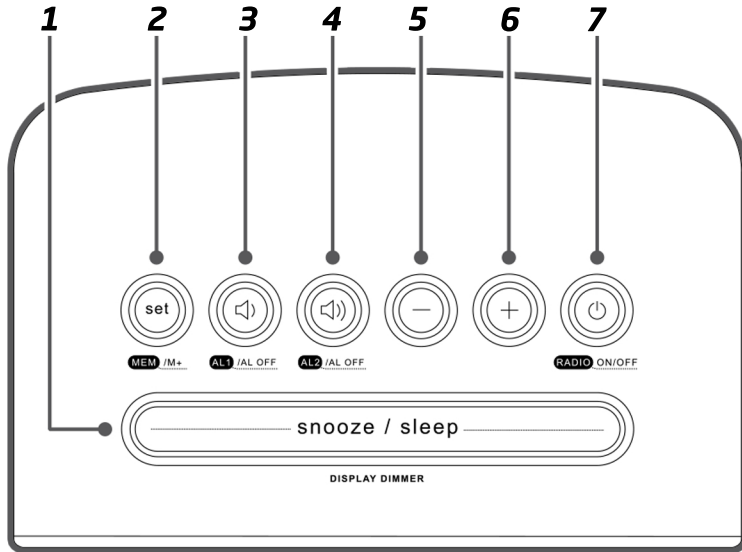

1. Snooze/Sleep/Display Dimmer

- Short press when the alarm sounds for a 9 minute snooze
- Short press when the radio is playing to set a sleep time
- Short press in standby mode to set the display brightness

2. Set

- Long press in standby mode to set the time
- Long press in radio mode to save radio station presets

3.

- Volume down
- Alarm 1 setting and Alarm 1 On/Off in Standby mode

4.

- Volume up
- Alarm 2 setting and Alarm 2 On/Off in Standby mode

5. -

- Go backward/scan down the FM frequency band

6. +


- Go forward/scan up the FM frequency band

7. Power button

- Short press: On/Off

OVERVIEW


Front View

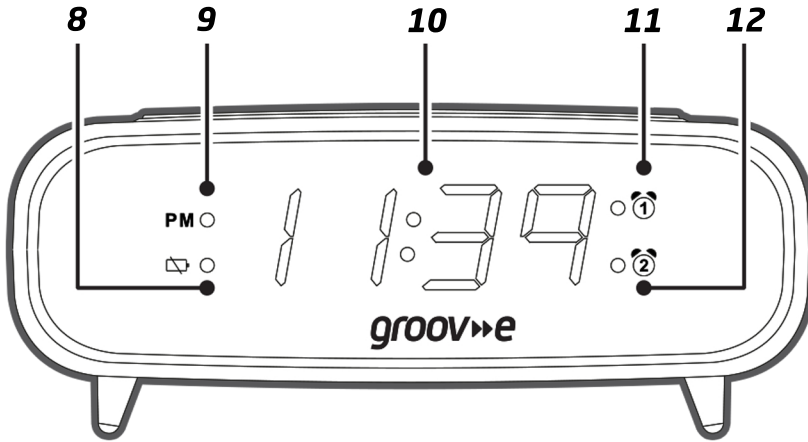

- 8. Low battery indicator**
- 9. PM time indicator**
- 10. Display**

- 11. Alarm 1 indicator**
- 12. Alarm 2 indicator**

Back View

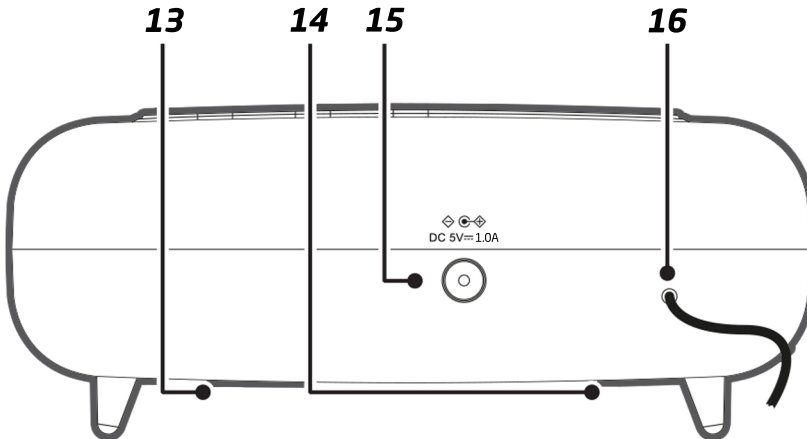

- 13. Speaker (underneath)**
- 14. Back up battery compartment
(CR2032 not supplied)**

- 15. Mains power socket**
- 16. Wire antenna**

OPERATION

Initial set-up

- 1. Unwind and extend the wire antenna on the back of the radio to obtain the best FM signal strength and audio quality.*
- 2. Connect the mains power lead into the socket on the back of the Radio.*
- 3. Plug the power adaptor into the mains power wall socket and switch on. The display will turn on and 12:00 will be displayed.*

Back up battery

We recommend that you fit a 3V CR2032 lithium back up battery (not supplied) into your Alarm Clock Radio, so that should there be a power cut your clock and alarm settings will be saved.

- 1. Use a cross head screwdriver to undo the screw on the battery compartment door on the underside of your radio and remove the battery cover.*
- 2. Fit a 3V CR2032 lithium battery with the + side facing up and replace the battery cover. Screw shut.*

Note: *When replacing the battery, do not disconnect the power adaptor as all your clock and alarm settings will be lost.*

Set the clock

In standby mode:

- 1. Long press the **Set** button to enter the clock set mode. The digits on the display will flash.*
- 2. Use the '-' button to set the correct hour in 12 hour clock and the '+' button to set the correct minutes.*

Note: *The PM indicator on the front left of the display will turn on to indicate the time after midday.*

- 3. Short press the **Set** button to confirm the clock setting. The display will stop flashing.*

OPERATION

Display dimmer

In standby mode:

1. Short press the **Snooze / Sleep** button to change the display brightness, there are 3 options available as well as display off (off, low, medium or high).

FM radio

Power on/off

1. Short press the  Power button to turn the FM radio On or Off.

Adjusting the Volume

There are 15 volume levels available, when you adjust the volume the current setting will be displayed.

Volume down

- Short press to decrease the volume in steps.
- Long press to progressively decrease the volume.

Volume up

- Short press to increase the volume in steps.
- Long press to progressively increase the volume.

Tuning to an FM station

- Long press the '-' button to scan down the frequency band
- Long press the '+' button to scan up the frequency band.
- Short press the '-' or '+' button to fine tune each station, if required.

Note: *If reception is still poor, adjust the wire antenna or try moving the radio to another location.*

OPERATION

Radio display

When you are listening to the radio, the display will change to show the clock time. To check the current tuned radio frequency, just short press the '-' or '+' button.

Storing an FM station preset

Your radio can store up to 10 FM stations for instant access to your favourite stations.

1. Tune your radio to the station that you wish to preset.
2. Long press the **Set** button until 'P01' (or the next available preset location) is displayed.
3. Use the '-' or '+' button to move to the preset location that you would like to store the radio station to (P01-P10).
4. Short press the **Set** button to confirm.

Tune to an FM preset station

With the radio on:

1. Short press the **Set** button repeatedly until the preset location you would like is displayed (P01-P10).
2. Wait a few moments. The radio will tune to the station stored under that preset location and will begin to play.

Note: If no FM station has been stored under the preset location, the radio will revert to the previously selected radio station.

Alarm

Setting an Alarm

Note: Check that your clock radio has the correct time before you set an alarm. Your clock radio has two separate alarm settings, Alarm 1 and Alarm 2.

With the radio off and in standby mode:

1. Long press **AL1** (🔔) button or **AL2** (🔔) button to enter the alarm settings. The clock display will flash.

OPERATION

2. Use the '-' button to set the hour for your alarm and the '+' button to set the minutes for your alarm.

3. Short press the relevant **AL1**  or **AL2**  button to confirm your alarm time settings.

4. 'B' for the Alarm buzzer will flash in the display. To select the radio for your alarm short press the '-' or '+' button. The last tuned radio station will flash in the display and this will be used for your radio alarm.

5. Short press the relevant **AL1**  or **AL2**  button to confirm your alarm. An LED will appear next to the ① or ② symbol on the display when an alarm has been set.

Note: To change between the Buzzer or Radio for your alarm, use the '-' or '+' button when 'B' for the buzzer or the last tuned radio station frequency is flashing on the display during the alarm set up. Short press the **AL1**  or **AL2**  button to confirm.

Turn the Alarm on or off

In standby mode:

1. Short press the **AL1**  or **AL2**  button to turn the alarm/s on or off. The LED next to each alarm clock symbol ① or ② will turn on when an alarm is enabled.


Stop the Alarm

When an alarm sounds, the corresponding Alarm 1 ① or Alarm 2 ② LED will flash in the display.

1. Short press the **AL1**  or **AL2**  button to turn off an alarm when it sounds.

Snooze

1. When an alarm sounds you can short press the **Snooze / Sleep** button. The relevant Alarm LED will flash in the display and the Alarm will sound again in 9 minutes.

2. To cancel the Snooze function, short press the **AL1**  or **AL2**  button. The Alarm LED will stop flashing.

OPERATION

Sleep timer

When listening to the Radio you can set a sleep timer and your clock radio will switch to standby mode automatically. You can choose from 10, 20, 30, 40, 50, 60, 70, 80 and 90 minutes or OFF.

With the radio on:

- 1.** Short press the **Snooze / Sleep** button repeatedly until the sleep time you would like is displayed.
- 2.** Your radio will now automatically switch to standby mode at the end of the set Sleep time.
- 3.** Short press the **Snooze / Sleep** button to check the remaining sleep time minutes before the radio switches to Standby mode. You can also choose to reset the sleep time or select OFF.

Note: If you turn the radio off and on again using the  button, the Sleep timer will be cancelled.

TROUBLESHOOTING

No sound / power

- Adjust the volume.
- Check that you are in radio mode.
- Check the mains power wall socket is switched on.

Radio reception is poor

- Check that you have fully extended the wire radio antenna.
- Try rescanning and fine tuning the FM radio station/s.
- Try moving your clock radio to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your clock radio causing interference.

The function buttons do not respond

- Check that the mains power wall socket is switched on.
- Check that you are in the correct mode (standby or radio), for the function buttons that you are trying to use

SPECIFICATIONS

Features:

- **Digital alarm clock - wake up to radio or buzzer**
- **FM radio**
- **10 radio station presets**
- **LED display**
- **Dual alarm setting**
- **Display dimmer (low, medium, high or off)**
- **9 minute Snooze**
- **Sleep timer**
- **Back up battery option (CR2032, not included)**
- **Mains power adaptor (included)**



FM
Radio



Dual
Alarm



LED
Display



Display
Dimmer

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

- 1)*** Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
- 2)*** This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.
- 3) This Guarantee Excludes:***
 - (i)*** All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.
 - (ii)*** Alterations or adjustments made to equipment
 - (iii)*** Loss of data resultant from malfunction of hard drive or other storage device
 - (iv)*** Damage caused to any third party device as a result of using the product.
- 4)*** No liability under this guarantee shall be incurred:
 - (i)*** In respect of damage or loss occurring during transit to or from the purchaser
 - (ii)*** Where the serial number plate of the equipment has been removed or altered in any way.
- 5)*** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
- 6)*** The cost of carriage to and from Groov-e shall be borne by the purchaser.
- 7)*** This guarantee is personal to the original purchaser and is not transferable.
- 8)*** If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»»e

**Unit J
Braintree Industrial Estate
Braintree Road
Ruislip
Middlesex
HA4 0EJ UK**

Authorised EU Representative

*Rashmian EU Ltd
Robwyn House
Suite 3E
Corrintra
Castleblayney
Co. Monaghan
Ireland*

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty
www.groov-e.co.uk/warranty