

groov▶▶e

GV-WC09 *Asteria*



User Manual

Wireless Charging
Station with
Alarm Clock

groov-e.co.uk



30 Day Right To Return

We do not envisage any problems occurring with your groov-e GV-WC09 Asteria, Wireless Charging Station with Alarm Clock. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase www.groov-e.co.uk/warranty. Proof of purchase required.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

***“Congratulations** on your purchase and **Thank You** for choosing the groov-e GV-WC09 Asteria. Please read the user guide carefully before using”.*

Important safety information

- 1•** Keep the product and all its parts out of reach of small children.
- 2•** Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
- 3•** Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- 4•** Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.

Note: Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.

In the box:


1 x GV-WC09

1x USB-C Charging cable

1 x User Manual

OVERVIEW

FRONT

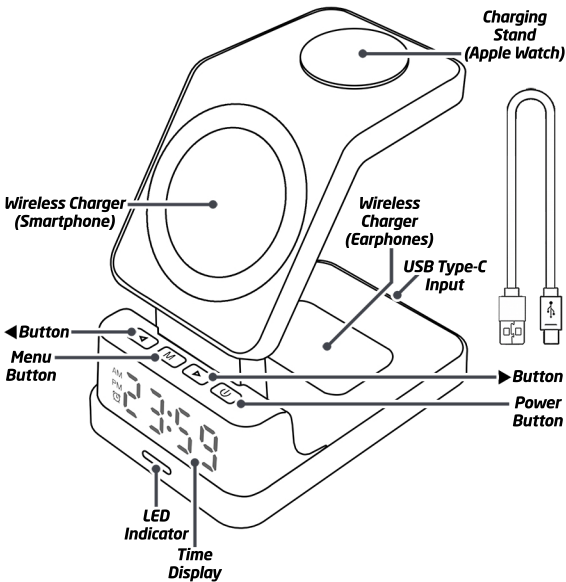

OPERATION

Setting the Time

With the time displayed on the screen.

Short press the **(M)** Mode Button to switch between 12 & 24 Hour time setting.

Long press the **(M)** Mode Button once, the display enters alarm setting, Long press the **(M)** Mode Button again to switch to time setting.

Short Press the **(P)** Button to decrease the time.

Short Press the **(N)** Button to increase the time.

Short press the **(M)** Mode Button to switch between Hours and Minutes settings.

Short press the **(P)** Power button to exit time setting.

Setting the Alarm

With the time displayed on the screen.

Long press the **(M)** Mode button once to enter the Alarm Settings (the alarm icon flashing on lower left corner).

Short Press the **(P)** Button to decrease the time.

Short Press the **(N)** Button to increase the time.

Short press the **(M)** Mode Button to switch between alarm Hours and Minutes settings.

Short press the **(P)** Power button to exit alarm setting.

Long press the **(P)** Power button to turn the alarm On/Off. When the alarm is turned on, an alarm icon shows up on the lower left corner. It disappears when turned off.

*Note: When alarm rings, the ringing time is around 30 seconds. The alarm will Snooze automatically for around 10 seconds. It will ring again for around 20 seconds, then the alarm will then stop. To stop the alarm before the allotted time is up Short Press any of the **(N)**, **(P)**, **(M)**, **(P)** Buttons to interrupt the alarm.*

Display Brightness Settings

With the time displayed on the screen.

Short press the **(P)** Button to decrease the display brightness until the display is completely off.

Short press the **(N)** Button to increase the display brightness.

There are 4 brightness setting modes.

Note: In settings mode if no buttons are pressed for 10 seconds the display returns to the Time Display screen.

Standby Mode

To enter standby mode press the **(P)** Power Button. To exit Standby mode press the **(P)** Power Button again.

Note: In standby mode the alarm will still sound. To stop the alarm refer to alarm settings. Removing the power supply will reset the alarm & time settings.

OPERATION


Wireless Charging a Smartphone

1. To enable wireless charging, insert the USB Type-C connector end of the supplied power cable into the USB Type-C port on the rear of the GV-WC09. Insert the USB A connector on the other end into a suitable USB power supply.

2. Remove your phone case, place your magnetic wireless charging enabled Smart Phone on the charging pad.

Your device will start charging. The indicator light will be a solid green.

Note: Your device must support magnetic wireless charging to be able to use this function.

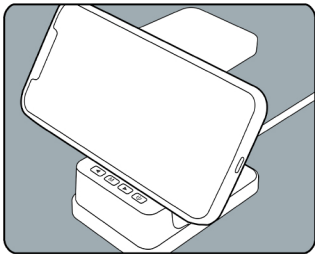


Wireless Charging Earphones

1. To enable wireless charging, insert the USB Type-C connector end of the supplied power cable into the USB Type-C port on the rear of the GV-WC09.

Insert the USB A connector on the other end into a suitable USB power supply.

2. Place your wireless charging enabled Earphones on the Earphones charging pad.

Your device will start charging. The indicator light will be a solid green (if the light flashes in red and green because it has detected a non-wireless charging device on the charging pad).

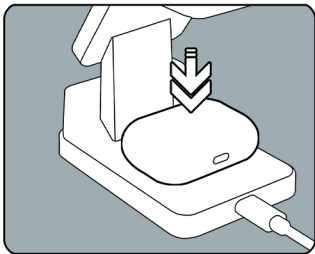


OPERATION

Charging a Smart Watch

1. Insert the USB Type-C connector end of the supplied power cable into the USB Type-C port on the rear of the GV-WC09. Insert the USB A connector on the other end into a suitable USB power supply.

2. Place your Apple Watch on the charging pad. Your Apple Watch will start charging.

Note: Your device must have wireless charging capabilities to be able to use this function.

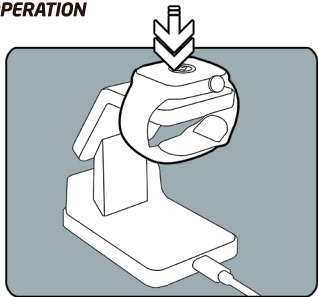

MagSafe & Apple Watch are trademarks of Apple Inc., registered in the USA and other countries

FEATURES

- *Wireless charging station for:*
- *Smartphone -*
- 1. *Compatible with all wireless magnetic charging enabled smartphones including iPhone 12/13/14/15 or newer and Samsung S20 or newer*
- *Earphones -*
- All *wireless charging enabled earphone models, including AirPods/Airpods Pro*
- *Compatible with Apple Watch Series 1-9*
- *Magnetic charger compatible with Magsafe*
- *12/24H Clock with LED display*
- *Alarm Clock*
- *Auto snooze function*
- *Display dimmer*
- *Portable & lightweight*
- *Ideal for any room in the house or office*
- *USB-C Charging cable (included)*

SPECIFICATIONS

- **Input USB-C:** 9V/3A
- **Wireless Output:** 1.5W max (smartphone)
- **Wireless Output:** 5W (earphones)
- **Wireless Output:** 2W (smart watch)
- **QC 3.0 adaptor required for fast charging**



Smartphone
Wireless
Charger



Earphones
Wireless
Charger



Apple Watch
Wireless
Charger



Alarm
Clock

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

- 1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.**
- 2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.**
- 3) This Guarantee Excludes:**
 - (i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.**
 - (ii) Alterations or adjustments made to equipment**
 - (iii) Loss of data resultant from malfunction of hard drive or other storage device**
 - (iv) Damage caused to any third party device as a result of using the product.**
- 4) No liability under this guarantee shall be incurred:**
 - (i) In respect of damage or loss occurring during transit to or from the purchaser**
 - (ii) Where the serial number plate of the equipment has been removed or altered in any way.**
- 5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.**
- 6) The cost of carriage to and from Groov-e shall be borne by the purchaser.**
- 7) This guarantee is personal to the original purchaser and is not transferable**
- 8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.**

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov>e

**Unit J
Braintree Industrial Estate
Braintree Road
Ruislip
Middlesex
HA4 0EJ UK**

Authorised EU Representative

*Rashmian EU Ltd
Robwyn House
Suite 3E
Corrintra
Castleblayney
Co. Monaghan
Ireland*

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty

www.groov-e.co.uk/warranty